

POLY-U Thread Tape

Poly-U Thread Tape Tips & Tricks

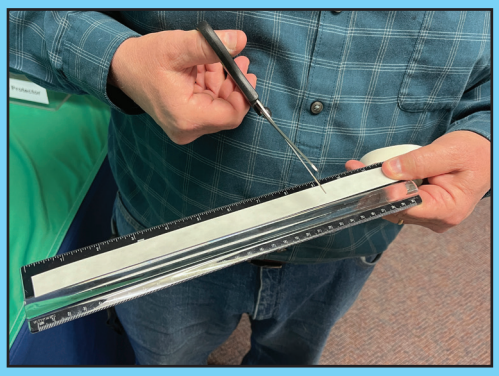

Measure and cut Poly-U Thread Tape to the desired length (see chart). Poly-U is super stretchy so don't worry if your cut is a little shorter than you wanted. Tip: use a sharp scissors to cut tape.

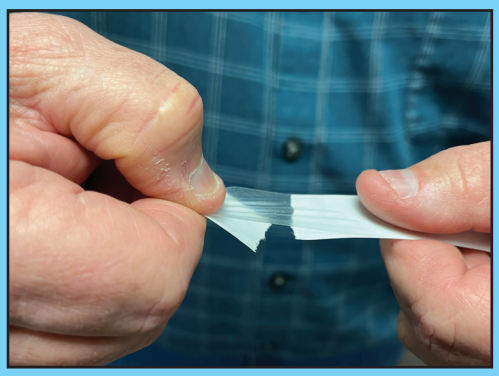

Firmly grasp one end of the cut length in one hand, and hold the tape about 1" in with the other hand. Pull and twist to break paper backing and create a tail. Use the sticky side of the 1" tail to start the wrap on the pipe.



Apply the tacky side of the tape to the pipe fitting and wrap in the correct direction. The tape should not unwind and will pull tight when assembled. Remove the remaining paper liner as you wrap.

Length of Tape Needed	
NPT Pipe	2 to 3 Wraps
1/8"	2-3/4"
1/4"	3-1/2"
3/8"	4-1/2"
1/2"	5-1/2"
3/4"	6-3/4"
1"	8-3/14"
1-1/4"	10-3/4"
2"	15"

Insider Tip when Working with Boxes

Push in the tab on the left edge of the bottom of the box and thread tape out the hole and up the left side. Push in the thumb slot on the side and slide the tape under the thumb slot and out the top of the box. That way you always have a tail ready for your next project.



Fluoramics

520 E. Countryside Circle
Lewiston, MN 55959
507-205-9216
fluoramics.com

U.S. Patent No. 12,624,778 B1

Fluoramics, Inc.
Ask an Engineer

???
fluoramics.com/ask

Available Poly-U Thread Tape Sizes and Packaging

Part Number	Size	Packaging	Case Quantity
9010040	1/4 in x 260 in	Box	24
9010042	1/2 in x 260 in	Box	24
9010044	1/2 in x 520 in	Box	24
9010045	3/4 in x 260 in	Box	24
9010046	3/4 in x 520 in	Box	24
9010050	1/2 in x 10 in	Bag – (6) 10" strips	tbd
9010052	1/4 in x 10 in	Bag – (6) 10" strips	tbd
9010054	3/4 in x 10 in	Bag – (6) 10" strips	tbd

Product Code 046 – Rev. 5/2026